

tep-by-Step User Guide for th Nook eReader - Using Hidden

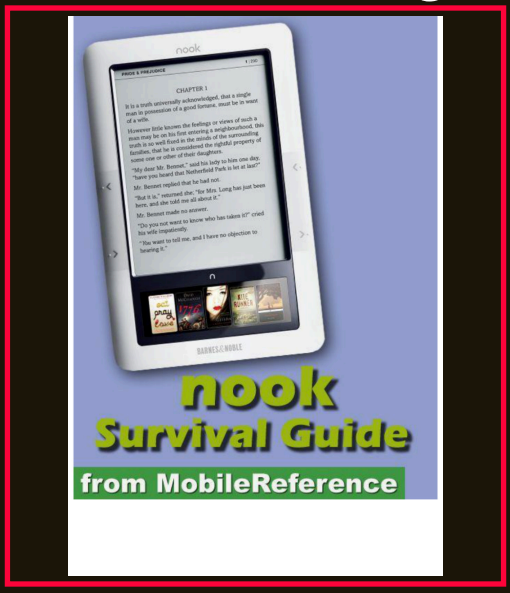

Complete Version Available On

ebookbe.com

scan the QR code to access the digital study port

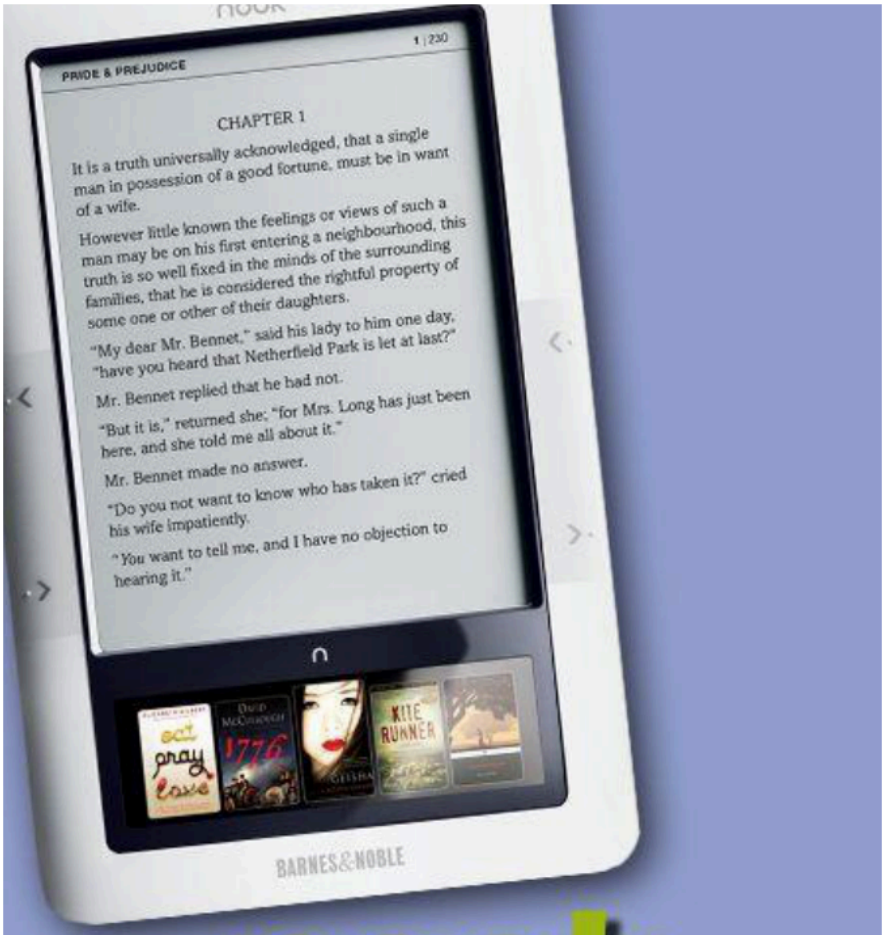

nook Survival Guide

om MobileReference

1. Getting Started
2. Buying Books and Other Media
3. Free eBooks
4. Managing Your Media
5. Reading Books and Taking Notes
6. Surfing the Web
7. Nook-Friendly Websites
8. Tips and Tricks
9. Music and Games
10. US & International Wireless
11. Troubleshooting
12. About this Guide
13. About MobileReference Books
14. A-Z Index

1. Button Layout
2. Turning the Nook On and Off
3. Putting the Nook in Sleep Mode
4. Charging the Nook
5. Connecting the Nook to a Computer
6. Registering Your Nook
7. Setting a Name for Your Nook
8. Setting Up Wi-Fi

1. Button Layout

The images below show the various Nook buttons and screens. The general functions of each button are described below each image.



Figure 1: Nook Front View

home screen at any time.
Touch Screen - Used to navigate the Nook in its entirety. Used for buying books, reading books, changing settings, and more.

Button - Returns you to the Nook's home screen.

Note: If the touch screen is not on at any time, just touch the button once to make it light up.



Figure 2: Nook Top View

Power Switch - Turns the Nook on and off. Also puts the Nook in sleep mode.



Back to Top

2. Turning the Nook On and Off

To turn the Nook **ON**, push and hold the power switch for five seconds. The Nook turns on. It takes a couple of minutes for the Nook to load at startup.

To turn the Nook **OFF**, push and hold the power switch until the screen goes blank. The Nook turns off.

Back to Top

3. Putting the Nook in Sleep Mode

To put the Nook in **Sleep** mode, push the power switch once without holding it while the Nook is turned on. Sometimes you may need to press the power switch again if the touchscreen lights up but nothing else happens. A screensaver is displayed and the Nook goes to sleep.

Note: You may turn off the Nook directly from Sleep Mode by holding the power button for three seconds. When you turn it back on, it will not be in sleep mode.

Back to Top

4. Charging the Nook

The first thing you want to do after you take your Nook out of the box is to charge it. Plug the provided power adapter into the USB/ Power port at the bottom of your Nook. When the charge indicator light turns off, your Nook is fully charged. Charging may take several hours.

Back to Top

5. Connecting the Nook to a Computer

1. Unplug the USB cable from the power adapter that came with your Nook.
2. Plug the small end of the USB cable into the bottom of your Nook. Plug the other end into a USB port on your computer.
3. On most versions of Windows, the Nook drivers are automatically installed (Vista and Windows 7 for sure).
4. Go to **My Computer**. Double-click the Nook removable drive as shown in Figure 4. The Nook folders appear.
5. Double-click a folder and you can drag and drop files to put them on your Nook.

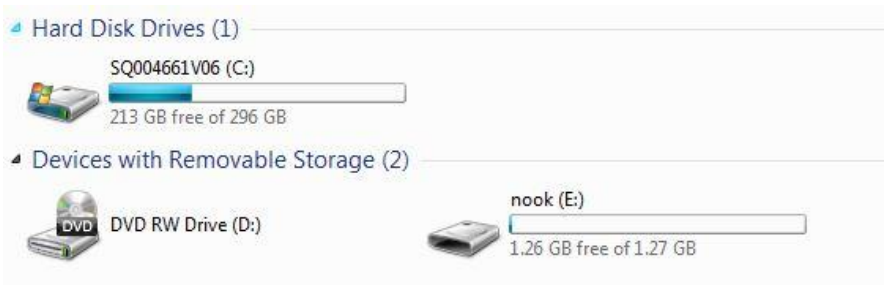


Figure 4: Nook Connected

Back to Top

6. Registering Your Nook

Before you can use your Nook, you must register it to an BarnesandNoble.com account. To register your Nook:

1. Touch the touchscreen and move your finger to the left to scroll. Touch the  icon. The Nook summary appears on the main screen and settings options appear on the touch screen.
2. If your Nook is already registered, your registered email appears in the profile section. If not, **Not Registered** is shown next to Email address.
3. Touch **Device**. The device settings options appear on the touchscreen. Touch **Register your nook**. The registration screen appears on the main screen.

Back to Top

7. Setting a Name for Your Nook

You may give a name to your Nook. To change your Nook's name:

1. Touch the touchscreen and move your finger to the left to scroll. Touch the  icon. The Nook summary appears on the main screen and settings options appear on the touch screen.
2. If your Nook is already registered, your registered email appears in the profile section. If not, **Not Registered** is shown next to Email address.
3. Touch **Device**. The device settings options appear on the touchscreen. Touch **Edit your profile**.
4. The Owner and nook Profile window appears on the main screen. You also have the option of entering an owner name. Enter the information and touch **Submit**. Your new nook name appears on the summary screen.

Back to Top

8. Setting Up Wi-Fi

While 3G is always on (as long as airplane mode is turned off), Wi-Fi needs to be turned on and set up the first time you use your nook. If you have access to a wi-fi hotspot, you can connect to a network using the Nook's built-in wireless chip. To turn on wi-fi and connect to a network:

1. Touch the touchscreen and move your finger to the left to scroll. Touch the  icon. If the Nook is already connected to a network, **Connected to <network name>** appears on the main screen.
2. Touch **Wi-Fi off**. The Wi-Fi is turned on. The Nook automatically searches for a network to which to connect.
3. If the Nook does not find your network, touch **Wi-Fi hotspot**. A